


Model 9000SE-A Customer Manual

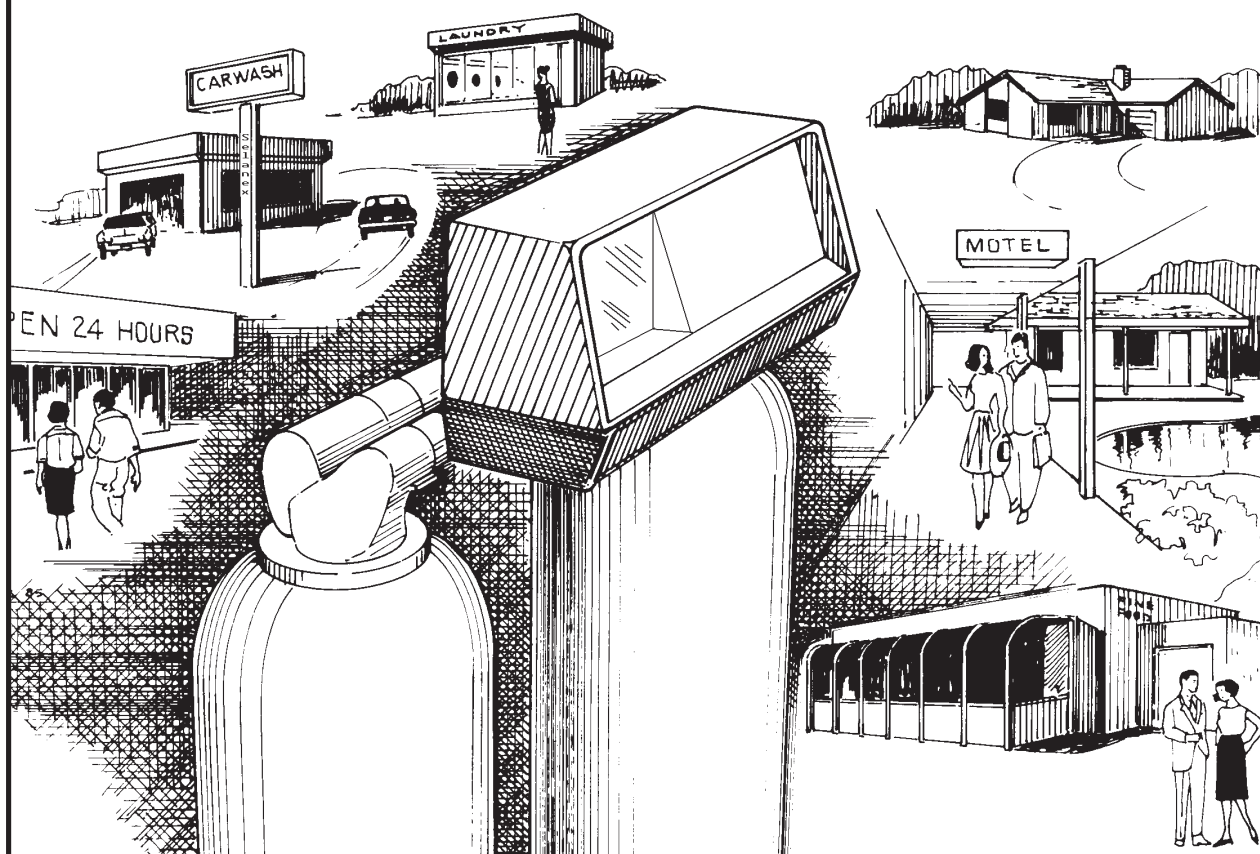

MODEL 9000SE-A

Installation Information

JOB NO:

MODEL NO:

DESIGN HARDNESS: mg/l as CaCO_3

CAPACITY PER UNIT: kg. as CaCO_3

RESIN VESSEL SIZE: DIA. x HIGH

BRINE TANK SIZE: DIA. x HIGH

SALT SETTING PER REGENERATION: Kg. NaCl

RESIN VOLUME: LITRES

9000SE CONTROL VALVE SPECIFICATIONS & SETTINGS:

1) Type of Timer: SE electronic - Immediate meter initiation

2) Regeneration programme settings:

a) Backwash min.

b) Brine & Slow Rinse min.

c) Rapid Rinse min.

c) Brine tank refill min.

3) Drain Line Flow Control US gpm.

4) Brine refill rate: US gpm

5) Ejector size: #

6) Electrical: 24 volt 50 Hz 15VA

FOR SERVICE CONTACT:

MODEL 9000SE-A

general installation check list

WATER PRESSURE: A minimum water pressure of 1,8 bar is required for the regeneration valve to operate effectively. The maximum water pressure must not exceed 8,6 bar.

ELECTRICAL FACILITIES: A continuous 24 volt, 50 Hz. current supply is required. Make certain the current supply is always live and cannot be turned off with another switch.

EXISTING PLUMBING: Existing plumbing should be free from hardness scale and iron buildup. Piping that is built up heavily with hardness scale and/or iron should be replaced. If piping is clogged with iron, a separate iron filter unit should be installed ahead of the water softener.

LOCATION OF SOFTENER AND DRAIN: The softener should be located close to a drain.

BYPASS VALVES: Always provide for the installation of a bypass valve system.

CAUTION: Water pressure is not to exceed 8,5 bar. Water temperature is not to exceed 43°C. The unit must not be subjected to freezing conditions.

Physical installation (see back page for general arrangement)

1. Place to water softener assembly in its final position, making sure that the assembly is on a firm and level base.
2. All plumbing connections should be made in accordance with the appropriate Regulations. The pipe size for the drain should not be less than 1/2" n.b. hose.
3. If the main control valve and second tank adaptor are not already assembled to the pressure vessels then ensure that the centre distributor / riser tube is cut **FLUSH** with the top of the pressure vessel (*which includes any adaptor part*).
4. Lightly lubricate the outside of the distributor tube - the top 10mm is sufficient - and also the large O-Ring that seals the valves to the pressure vessels. *NOTE: Use only silicone lubricant. Do not use petroleum grease or aerosol based lubricants.*
5. Interconnection between the main valve and the second tank adaptor is normally via the supplied flexible hose assemblies. Use the supplied fibre gasket to seal the union nuts to the plastic ports.
6. If soldering pipework close to the final valve connections, ensure that heat cannot be transmitted or conducted to the plastic components. Failure to observe this requirement may cause permanent damage.
7. All inlet / outlet pipework threaded connections to the control valve must only be sealed with PTFE tape.
8. Ensure that when finally positioning the system that the floor under the components is clean and flat.
9. When all plumbing connections are completed, place the bypass valve system into the bypass position. Turn on the water supply and open a nearby cold water tap to allow water to flush out the new pipework. When it is running clean and clear, turn off the cold water tap but leave the system in bypass.
10. Connect the system to the electrical supply via a suitable transformer. **NOTE: The control system is designed to operate at 24vac only. DO NOT CONNECT DIRECTLY TO THE MAINS ELECTRICAL SUPPLY.**

Now you must set-up the control system

MODEL 9000SE-A

Control Start-Up Procedures

1. Set Time of Day

Whenever the valve is in Service the current time of day can be adjusted, the control programmed or an extra regeneration initiated

Service Indicator:

Valve in SERVICE - Dot ON
Extra Cycle Set - Dot flashing


Flow Indicator:

Flashing Dot when
water flows

Set UP
Button

P.M. Indicator

Set DOWN
Button

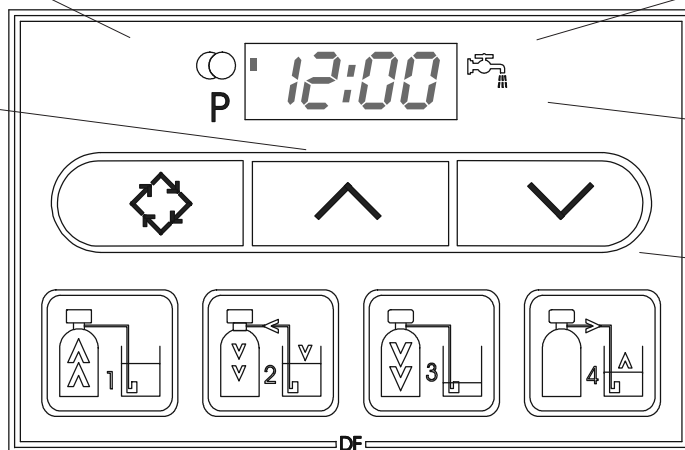


Push either the UP or DOWN set button once to adjust the Time of DAY display by one digit.
Push and HOLD either the UP or DOWN set button to adjust the Time of Day display by multiple digits

2. Enter Control Programming Mode

Programme Mode Indicator:

Programme mode entered - Dot ON

Extra Cycle
Button

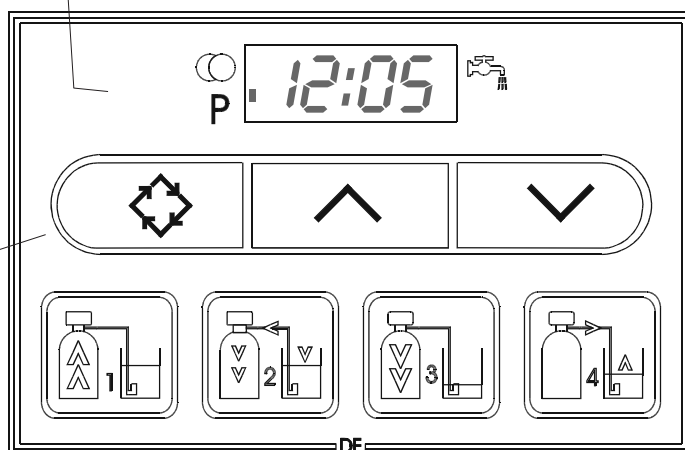

1. Push and HOLD both the UP & DOWN set buttons for 5 seconds to enter Programming Mode.
2. Push the Extra Cycle Button once per display until all have been viewed and this mode is exited and normal operation is resumed.


MODEL 9000SE-A

Control Start-Up Procedures

3. Set Control Programming


Programme Mode Indicator:

Programme mode entered - Dot ON

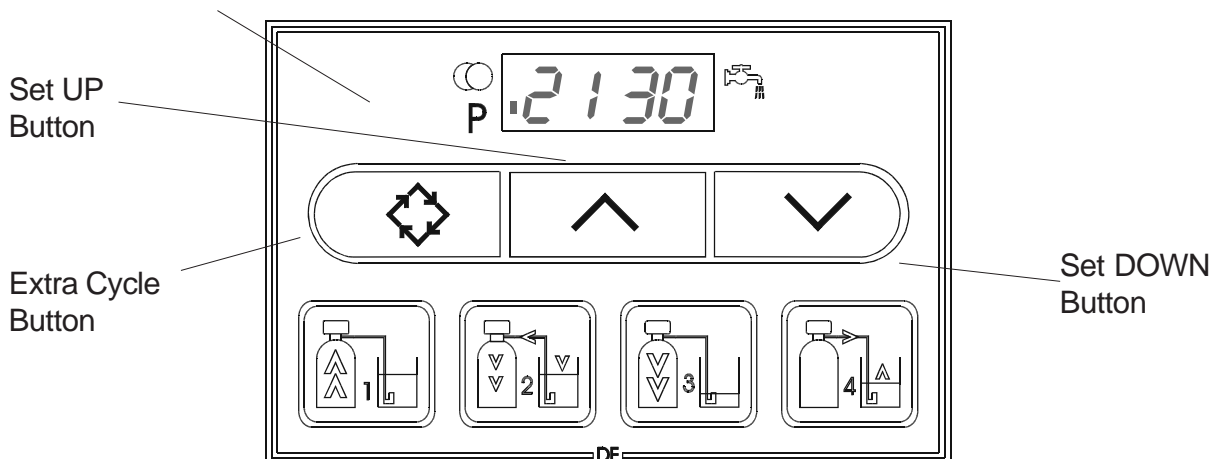

1. The first option setting display that appears in the Programme Mode is Treated Water Capacity. Using the Set UP or DOWN button, set the display to the capacity of the system in LITRES or CUBIC METRES. For example, in LITRES:

2130 litres treated water capacity



The maximum capacity setting in LITRES is 9999. If the softening capacity is greater than 9999 litres then the valve should have been programmed for a volume display in CUBIC METRES with an accuracy of one decimal place. If not, contact your supplier. If the control expects values in CUBIC METRES you will see a decimal point to the left of the extreme RH digit. The maximum setting range becomes 999.9m³

2. Push the Extra Cycle button. The second option setting that appears is the Regeneration Day Override. Using the set UP or DOWN button, adjust the display to show OFF




3. Control programming is now complete. Push the Extra Cycle button again to exit the programming mode and return to normal service.

MODEL 9000SE-A

Control Start-Up Procedures

4. Start an Immediate Regeneration

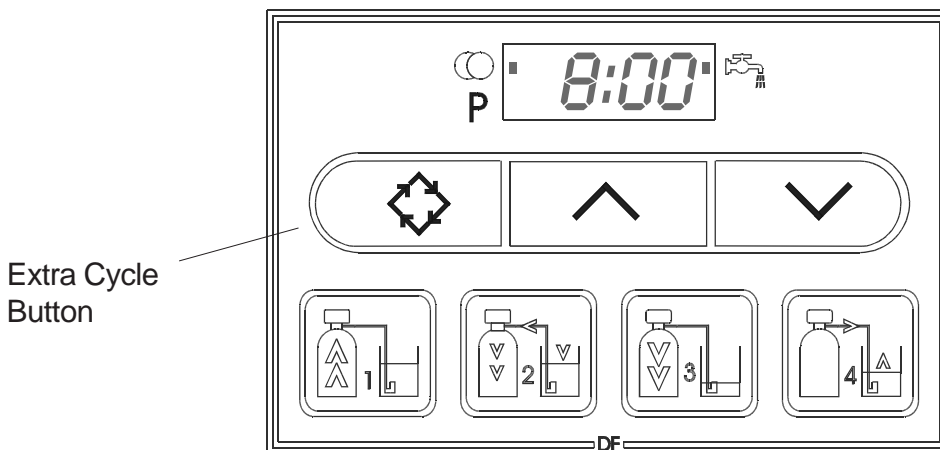































1. Press and Release the Extra Cycle button:

- With this **Immediate Regeneration** control the control will go into regeneration immediately.

5. Regeneration Cycle Displays


The following series of displays appear when the control enters a regeneration cycle
(times indicated are examples only):

Valve driving to regen step #1				Then				Less than 9 min. remains in regen step #1
Valve driving to regen step #2				Then				Less than 59 min. remains in regen step #2
Valve driving to regen step #3				Then				Less than 9 min. remains in regen step #3
Valve driving to regen step #4				Then				Less than 12 min. remains in regen step #4
Regen complete. Valve driving to service position				Then				Valve has returned to service

MODEL 9000SE-A

Control Start-Up Procedures

6. Fast Cycling the Valve through a Regeneration

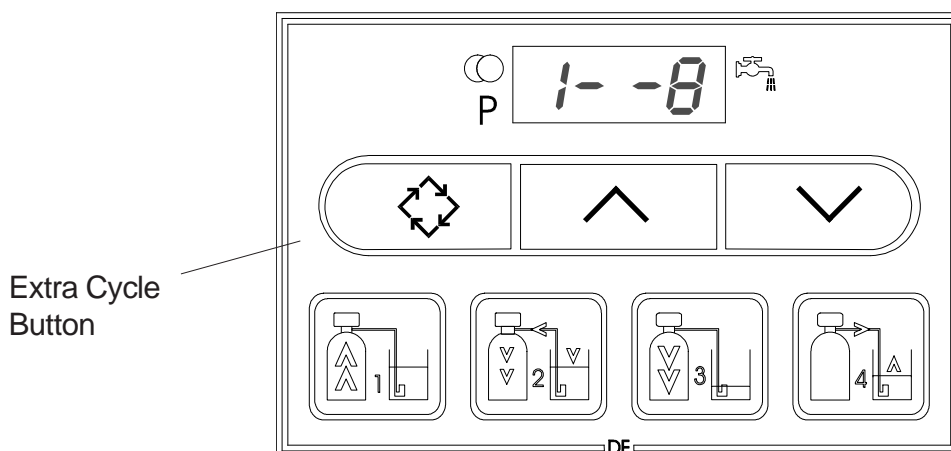

- A. Initiate a regeneration - see step 4. Once the valve reaches Regen step #1 let water flow to drain for approx. 5 minutes.

Next, manually step the valve through a regeneration cycle, check valve function in each step:

- B. Push the **Extra Cycle** button once to advance the valve to Regen. step # 2
C. Push the **Extra Cycle** button once to advance the valve to Regen. step # 3
D. Push the **Extra Cycle** button once to advance the valve to Regen. step # 4
E. Push the **Extra Cycle** button a last time to advance the valve back to SERVICE

Repeat this process for the other tank.

7. Final Set-Up


With proper valve operation verified:

- A. Add water to the salt container until the top of the air check is covered. Manually step the valve into the **BRINE DRAW** position (step #2) and allow the valve to draw water out of the salt container until the water level reduces no further. The water level should be at the midpoint of the screen section of the screen intake area,
- B. Manually step the valve to the **BRINE REFILL** position and then allow the valve to return to the **SERVICE** position automatically.
- C. With the valve in the **SERVICE** position, place salt into the salt container to the recommended level. - Use the type of salt recommended by your supplier.

Set-Up is now completed and the control can be left to run automatically.

MODEL 9000SE-A


System *SERVICE* position

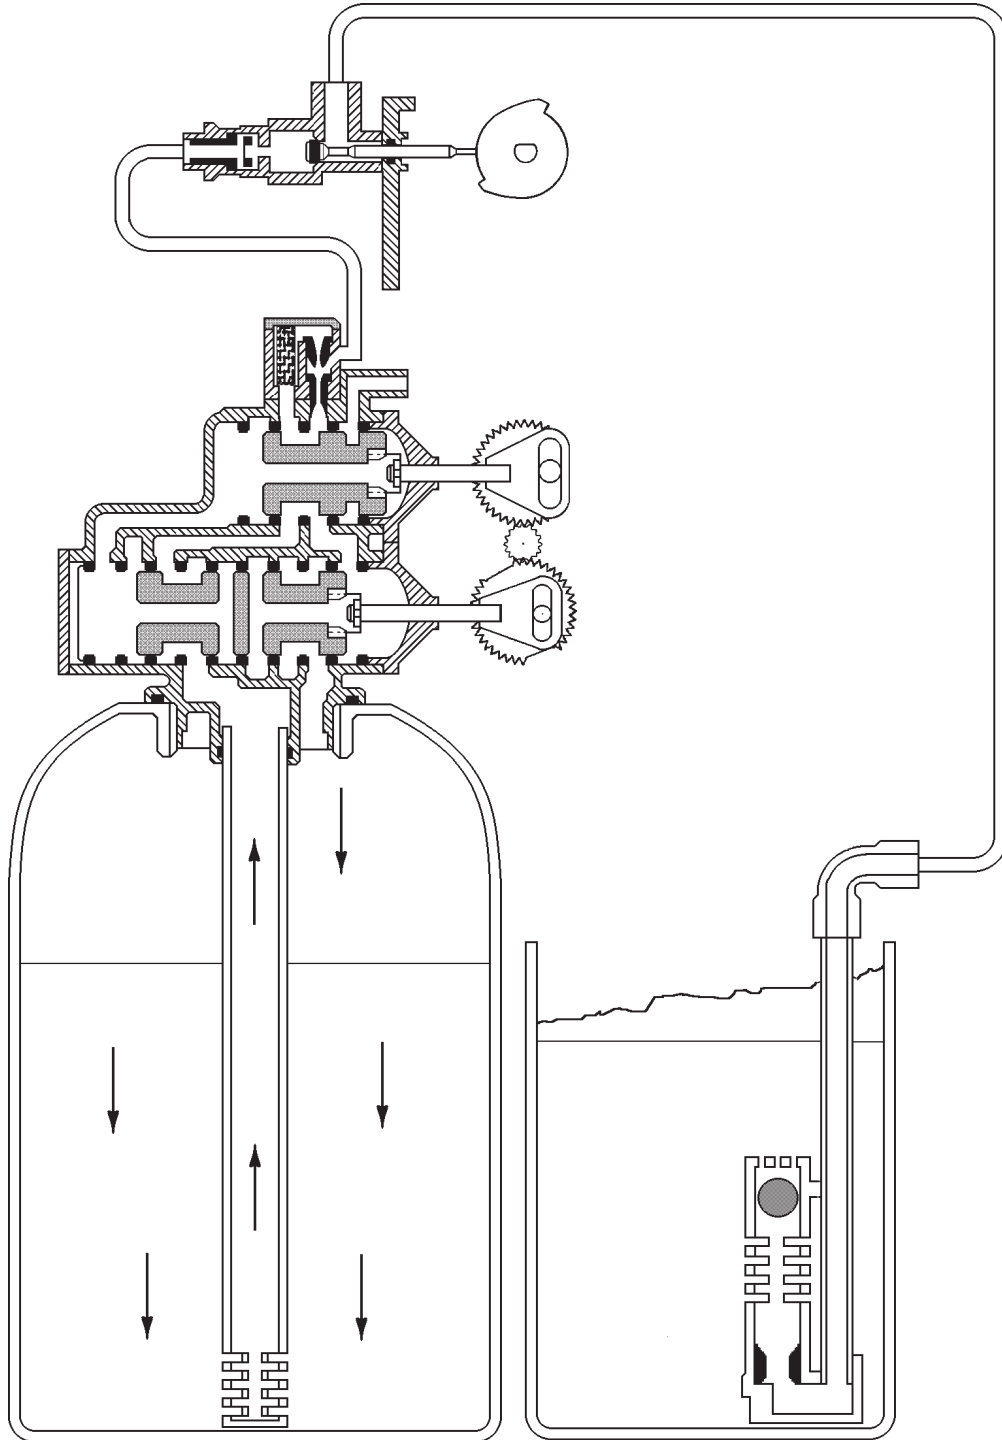

Hard water enters the system at the valve inlet, flows around the lower piston & down through the resin in the first pressure vessel. Softened water exits via the bottom collector system in the resin vessel, flows around the lower piston and flows to service via the system water meter. The second resin vessel is regenerated & on standby.

MODEL 9000SE-A


System TANK SWITCHING position

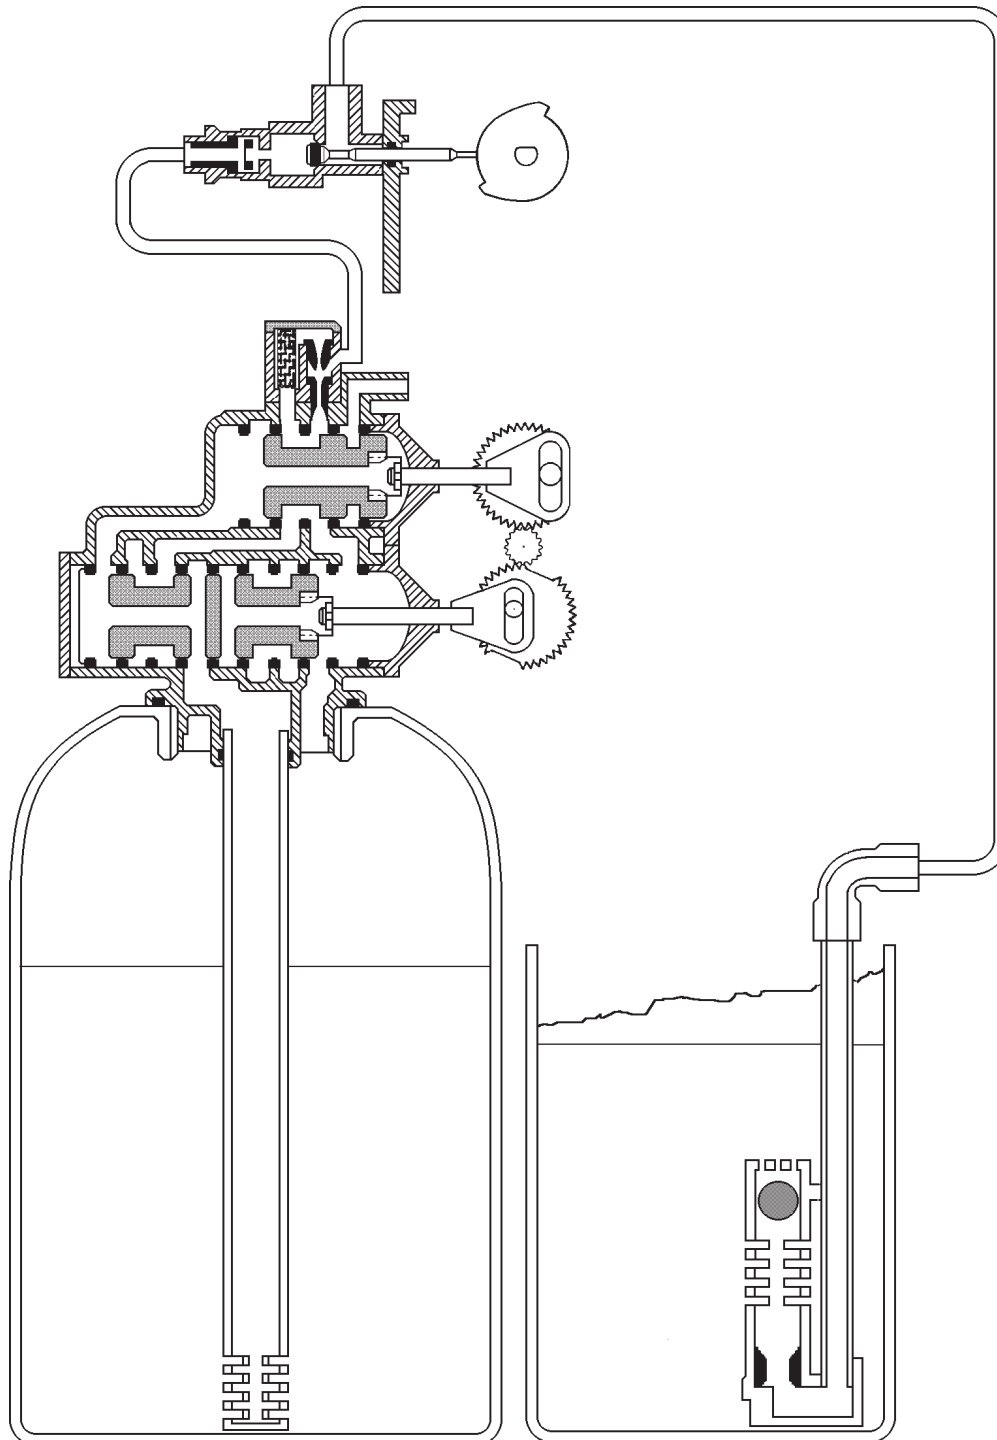

Hard water enters the system at the valve inlet, flows around the lower piston & through the pipe leading to the second vessel, passing through the resin in the second vessel. Softened water exits via the bottom collector system in the second vessel. It transfers via the connecting pipe to the valve, flows around the lower piston and flows to service via the water meter. The first resin vessel is out of the service flow path & is ready for regeneration.

MODEL 9000SE-A


System BACKWASH position

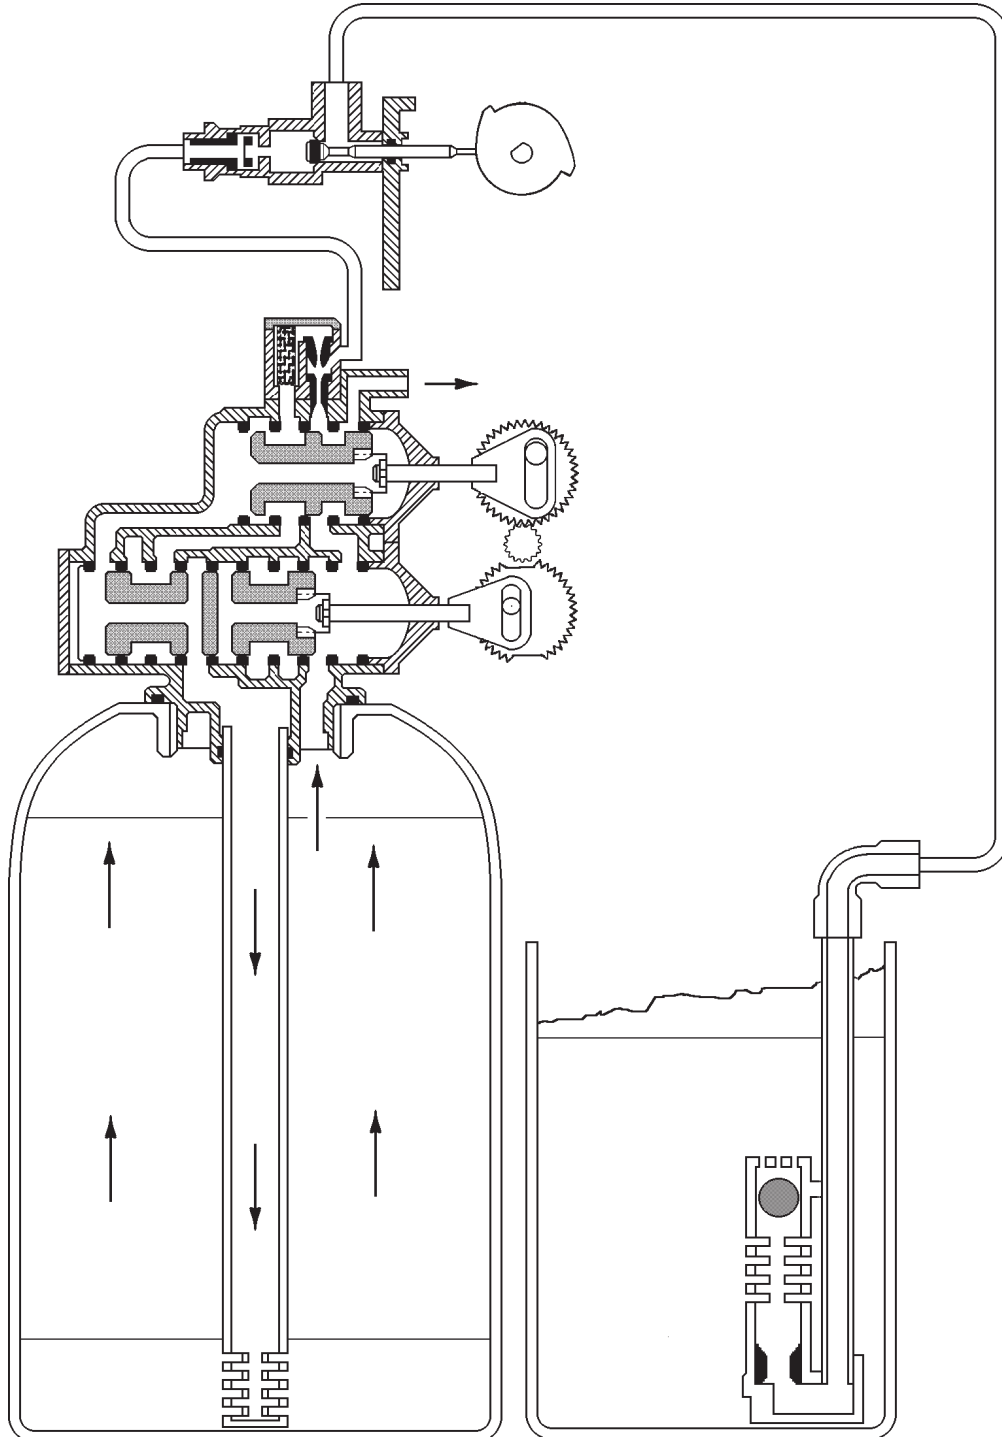

Softened water from the second pressure vessel flows around the lower piston, around the upper piston and exits into the bottom of the first vessel via the bottom screen. The resin bed is expanded by the upflow of water, which then exits the valve via the upper piston and flows to drain.

MODEL 9000SE-A


System **BRINE DRAW** position

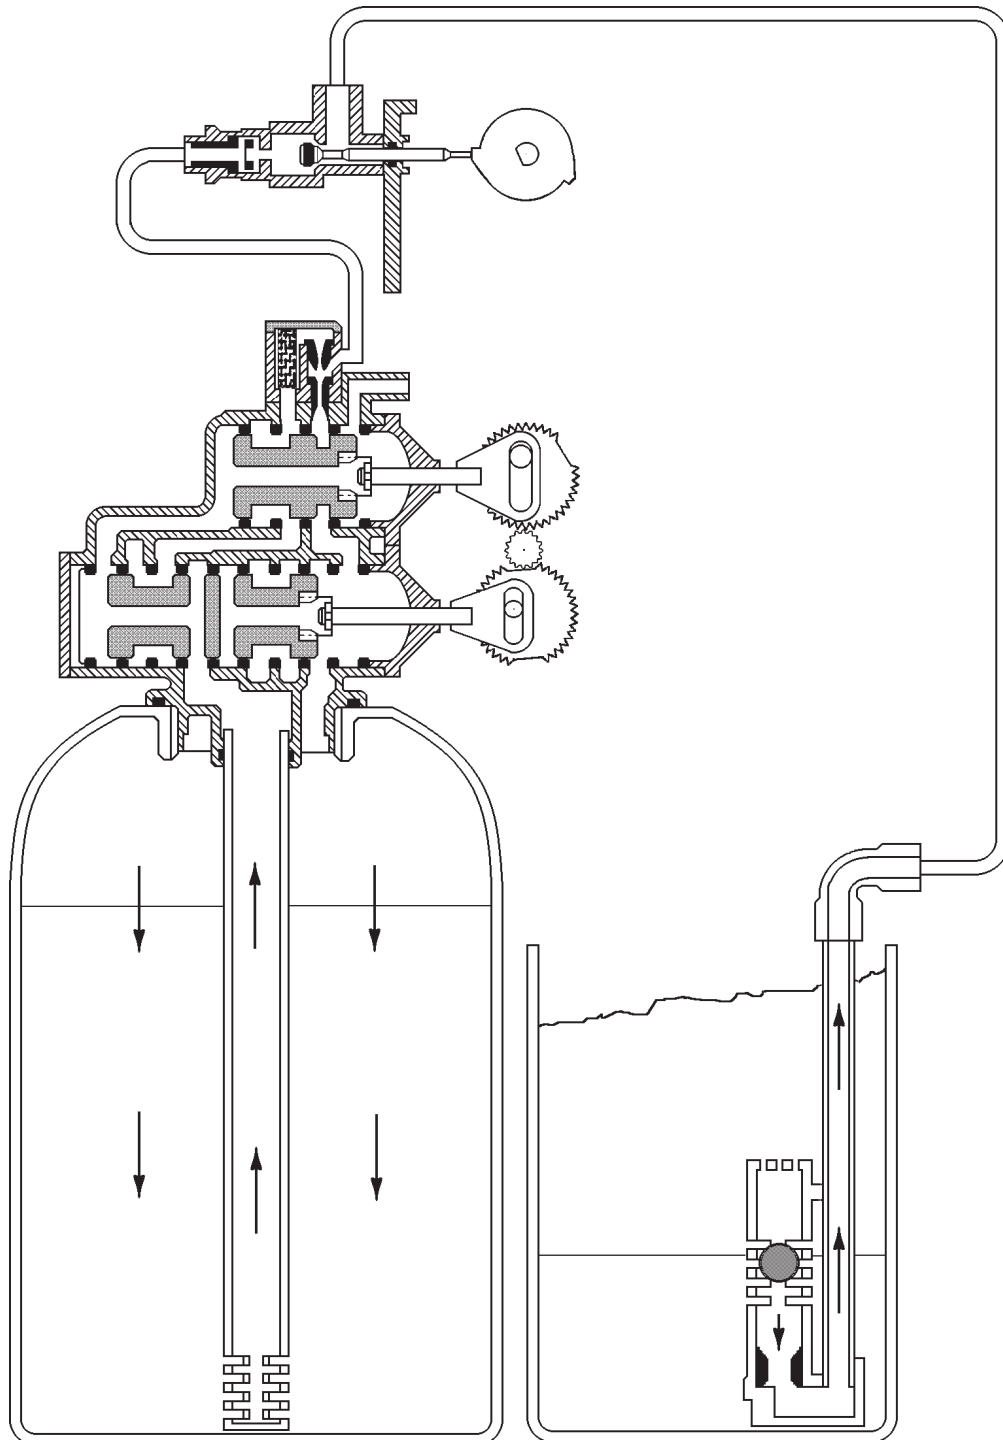

Softened water from the second pressure vessel flows around the lower piston, around the upper piston & into the ejector housing. As it passes through the ejector nozzle, a vacuum is generated which draws brine up from the brine tank. Brine flows around the upper piston, down through the resin bed and exits via the bottom screen. It flows up the centre tube, through the bore of the lower piston and up into the upper valve section where it exits via the bore of the upper piston to drain.

MODEL 9000SE-A


System SLOW RINSE position

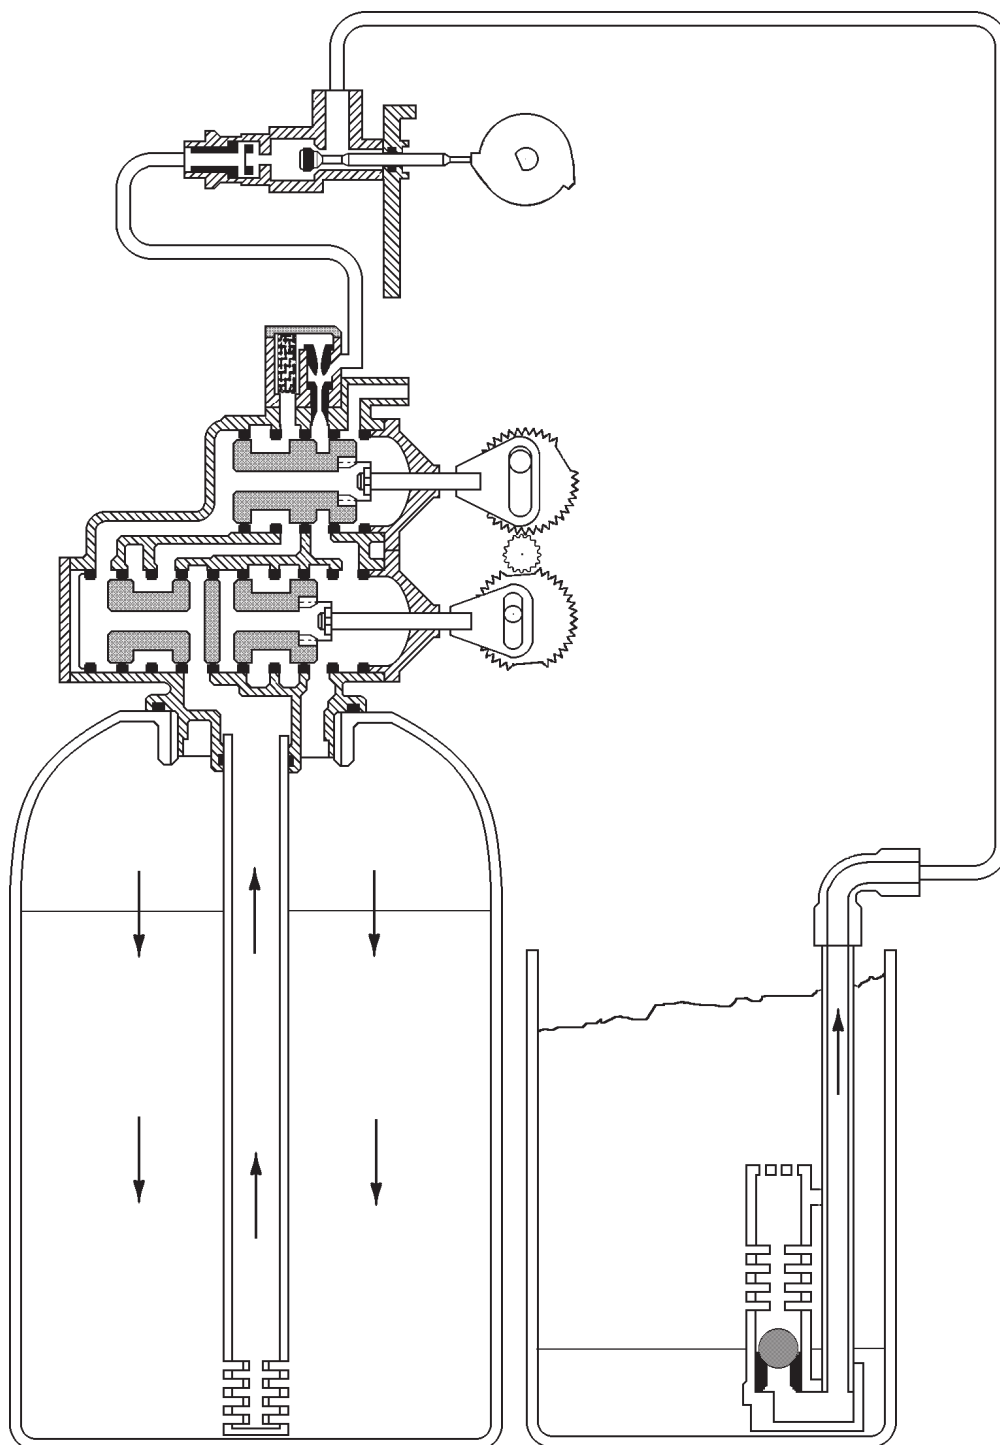

Softened water from the second pressure vessel flows around the lower piston, around the upper piston & into the ejector housing. As it passes through the ejector nozzle, a vacuum is still generated but the brine air check assembly has shut off preventing further brine/air suction. The softened water flows around the upper piston, down through the resin bed and exits via the bottom screen. It flows up the centre tube, through the bore of the lower piston and up into the upper valve section where it exits via the bore of the upper piston to drain.

MODEL 9000SE-A


System RAPID RINSE position

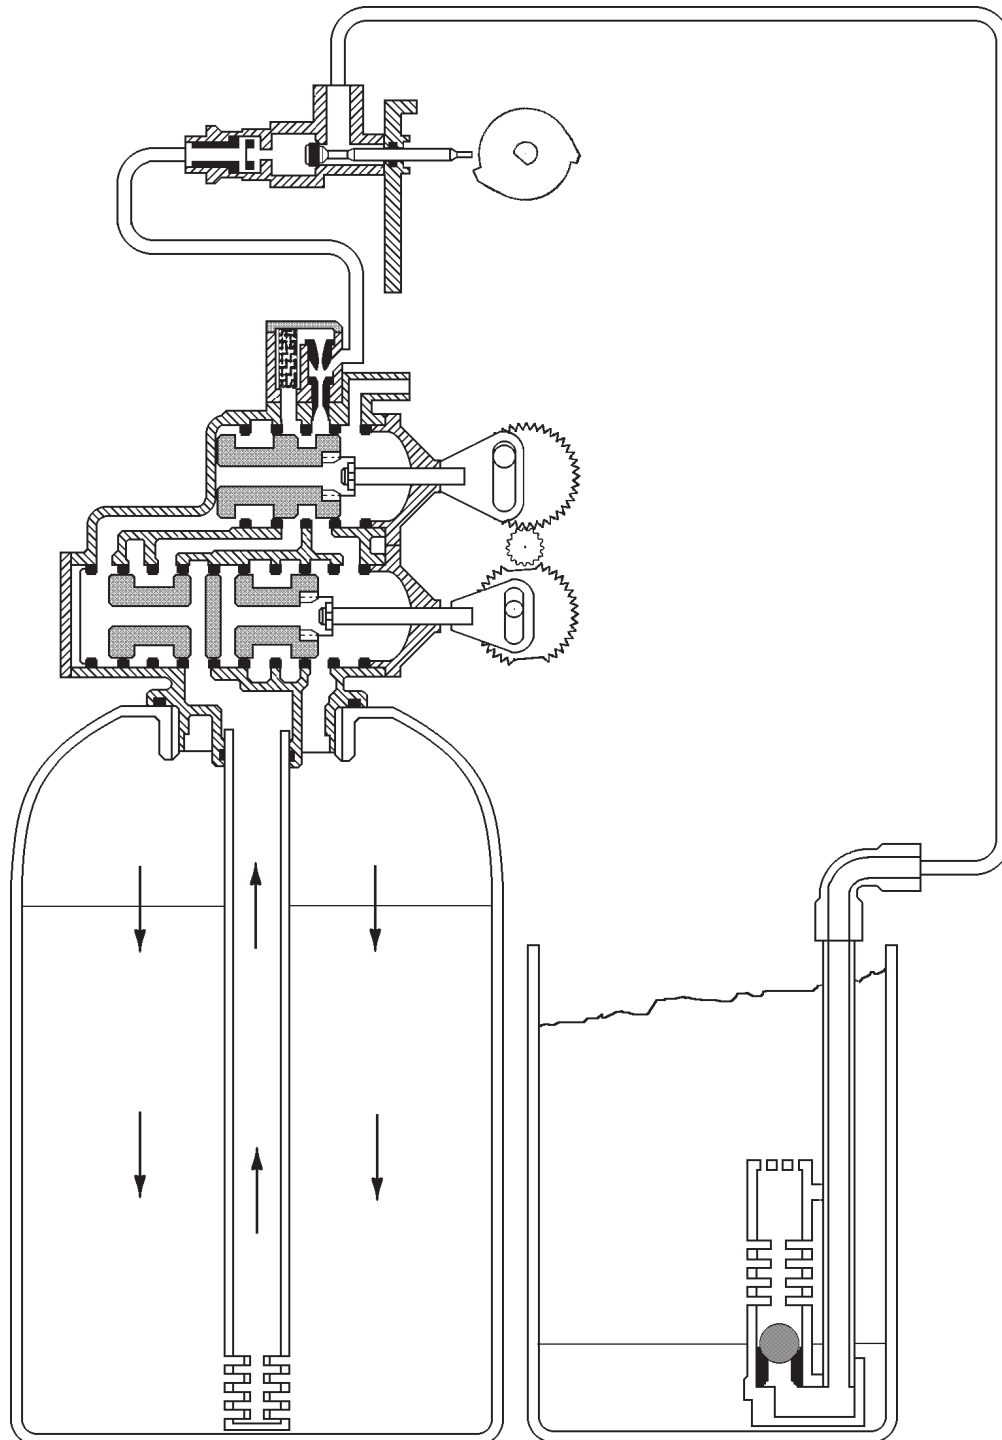

Softened water from the second pressure vessel flows around the lower piston, around the upper piston & down through the resin in the first vessel. The rinse water exits the first vessel via the bottom screen. It flows up the centre tube, through the bore of the lower piston and up into the upper valve section where it exits via the bore of the upper piston to drain.

MODEL 9000SE-A


System BRINE REFILL position

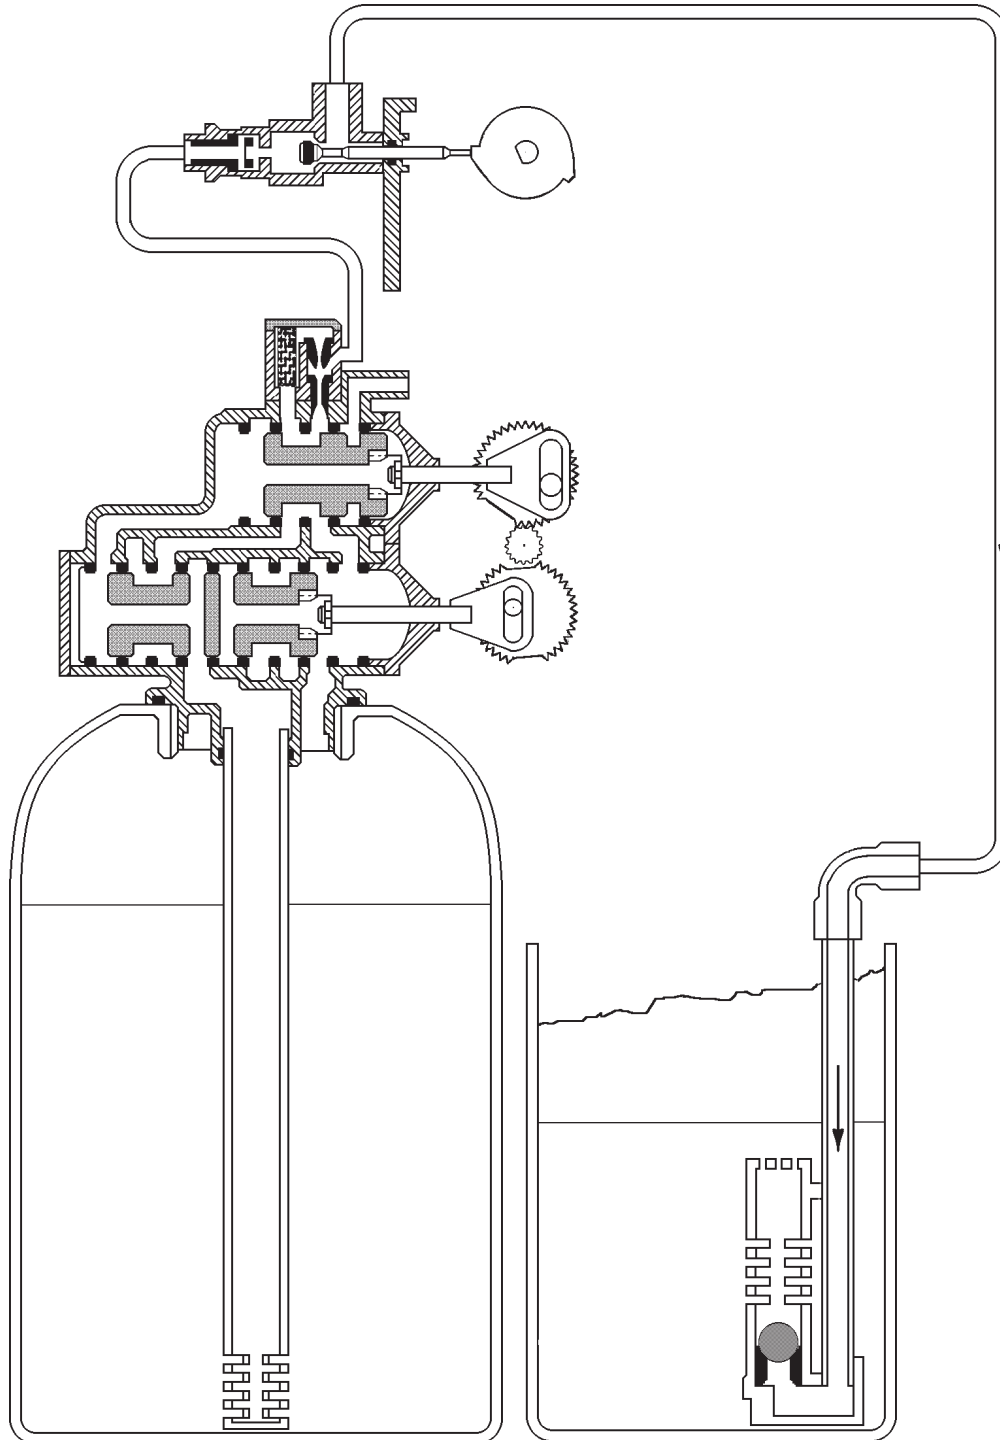

Softened water from the second pressure vessel flows around the lower piston, around the upper piston & into the ejector housing. The flow rate is regulated by a flow orifice as the softened water exits via the brine valve and into the brine tank. In addition to refilling the brine tank, the softened water also flushes the brine system and resets the air check ball. No water flows through the first vessel at this stage.

MODEL 9000SE-A


System SERVICE - TANKS SWITCHED position

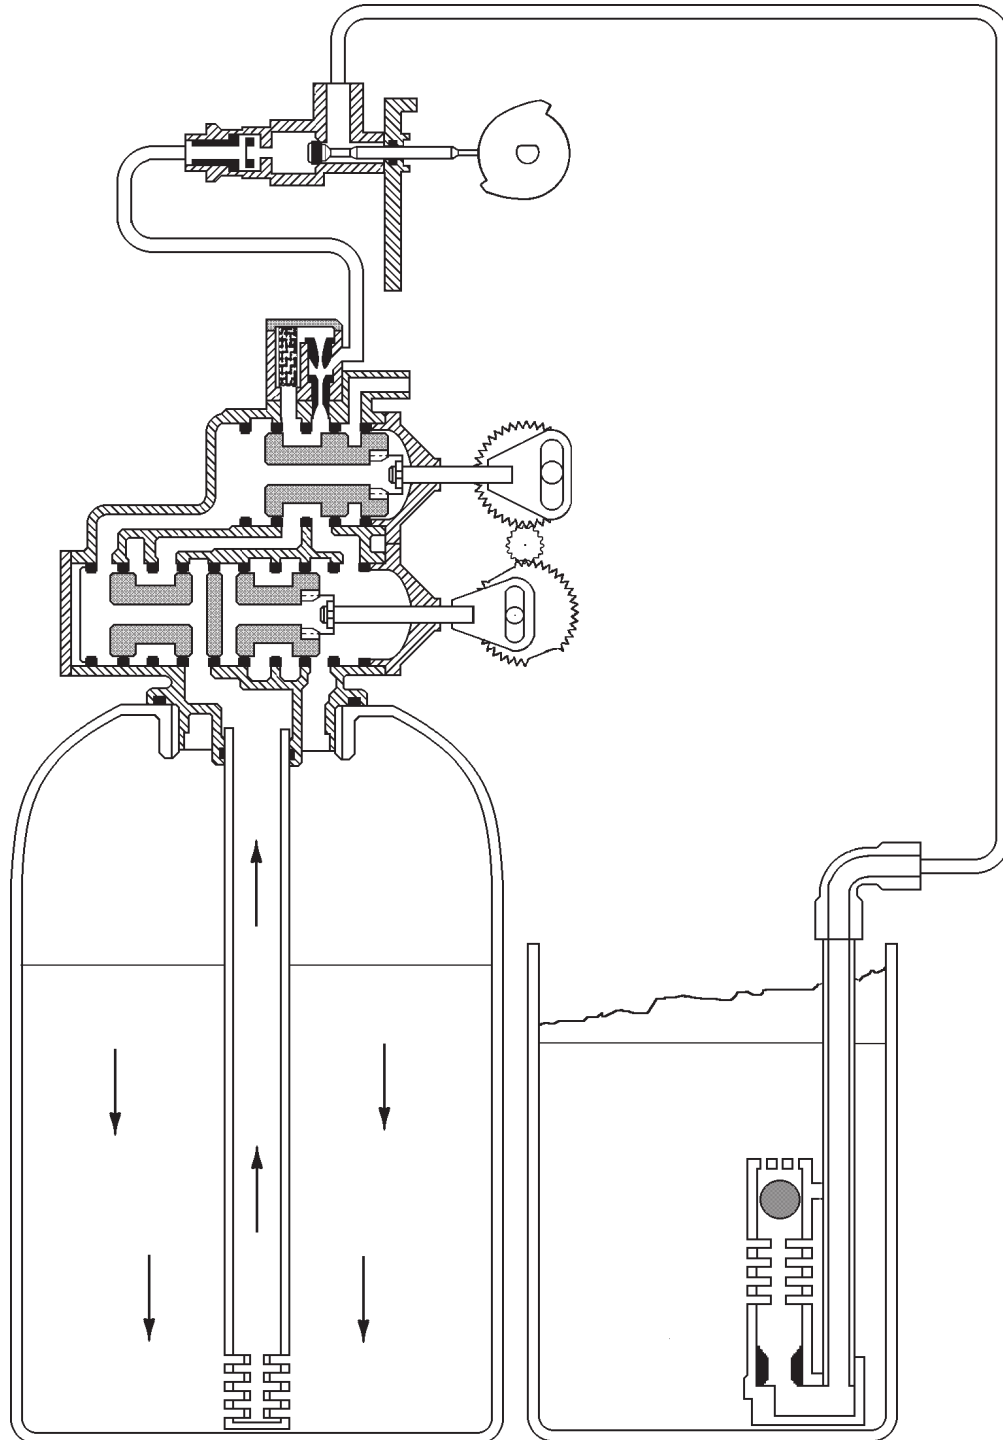

Hard water enters the system at the valve inlet, flows around the lower piston & through the pipe connecting to the second vessel. It flows down through the resin in the second pressure vessel and exits via the bottom screen, flowing up the centre tube and back across to the main valve via the connection pipe. The softened water exits via the lower piston, through the water meter and away to service. The regenerated first pressure vessel is out of the flow path and on standby, ready for duty when the second tank becomes exhausted.

MODEL 9000SE-A

Control Power Head Assembly

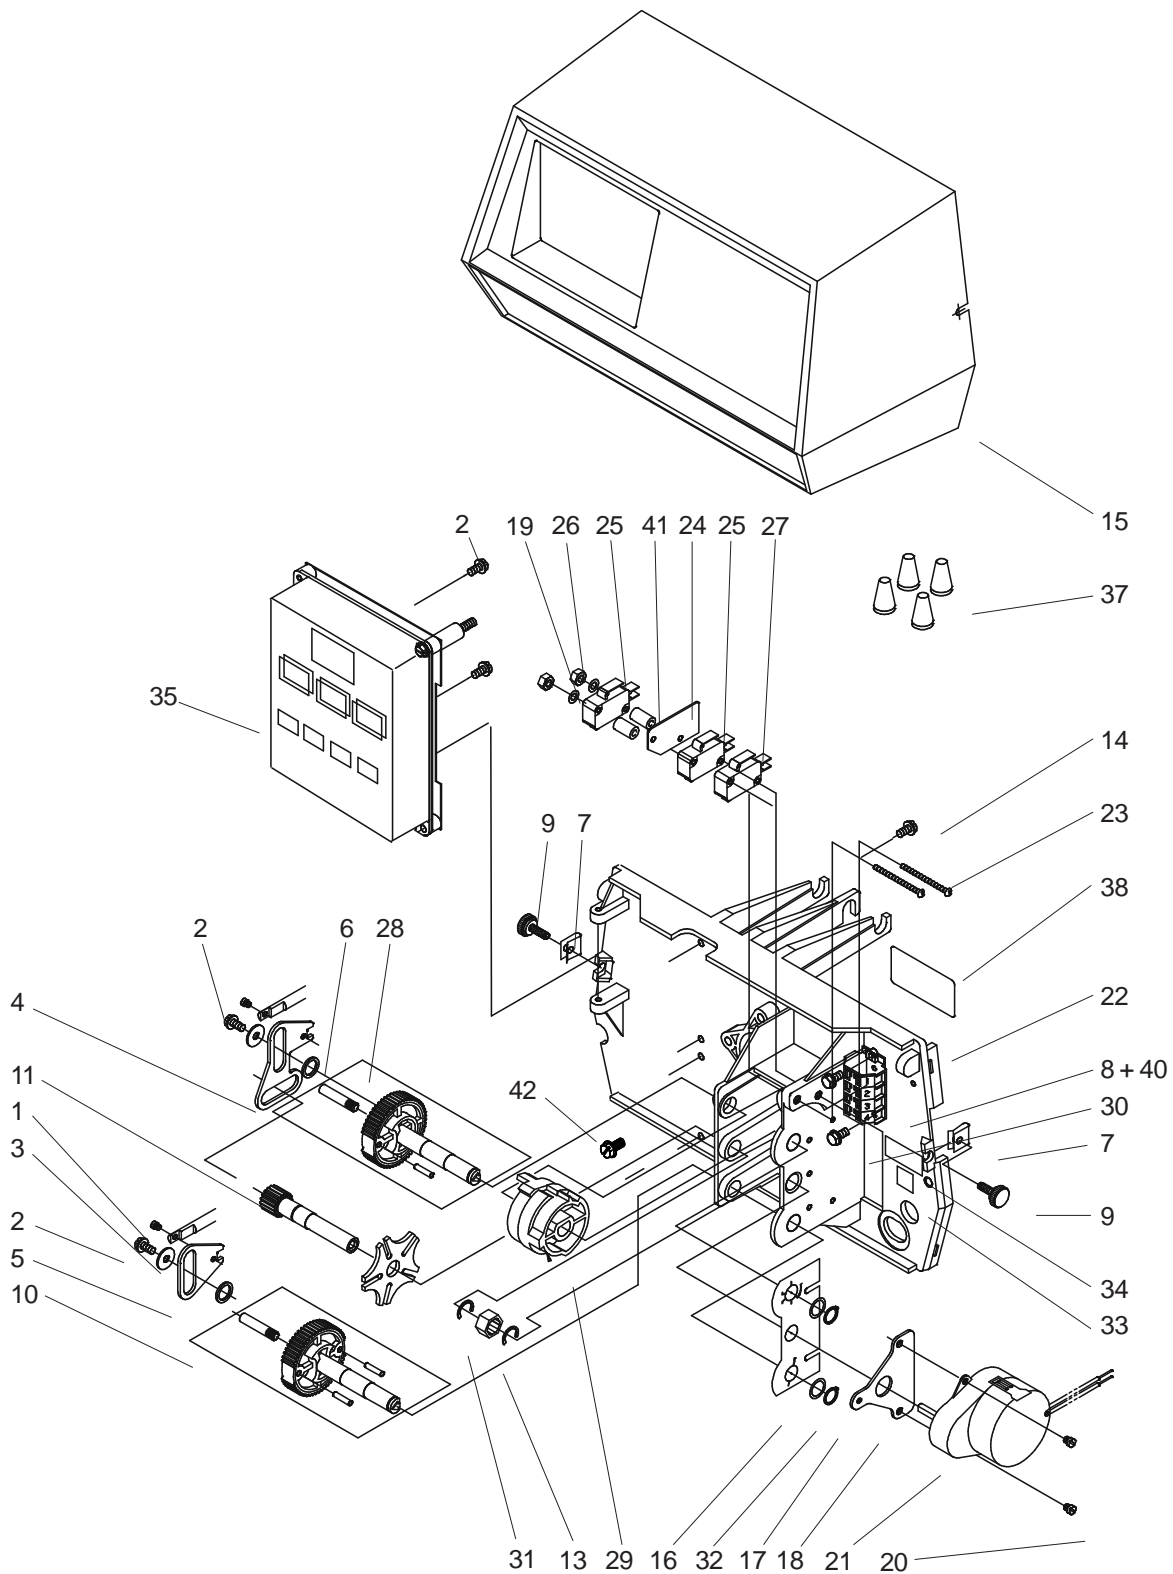



MODEL 9000SE-A

Control Power Head Assembly

Item	Qty	Part Number	Description
1	2	11335	Screw
2	4	13296	Screw
3	2	23250	Washer
4	1	14921	Piston rod link - Upper
5	1	15019	Piston rod link - Lower
6	2	15372	Washer
7	2	18728	Clip nut
8	1	23511	Terminal strip - 4 position
9	2	19367	Cover screw
10	1	25870	Lower drive gear assy
11	1	15135	Drive gear
12	1	14896	Geneva wheel
13	1	17315	Manual regeneration nut
14	1	10300	Screw
15	1	26473	Cover assembly
16	1	27002	Shaft position label
17	2	14917	Retaining ring
18	1	15199	Motor plate
19	2	11663	Lockwasher
20	2	19160	Screw
21	1	26503-24	Drive motor 24vac
22	1	15131	Backplate
23	2	16442	Screw
24	1	10302	Insulator
25	2	10218-01	Microswitch
26	2	10339	Nut
27	1	16433	Microswitch
28	1	25868	Upper drive gear assy
29	1	15132	Triple cam assy - 9000
30	2	10299	Screw
31	2	15810	Retaining ring
32	2	15692	Spacer
33	1	23474	Label - "Assembled By"
34	1	21271	Label - "Serial Number"
35	1	26985	SE Timer assy
36	1	17967	Meter cable connector
37	4	12681	Wire nut
38	1	26210-90	Label - "CE"
39	1	14822	Wire harness - <i>not shown</i>
40	2	n/a	Label - Terminal strip
41	2	16443	Stand-off
42	7	15331	Backplate mount screw

MODEL 9000SE-A

Control Valve Body Assembly

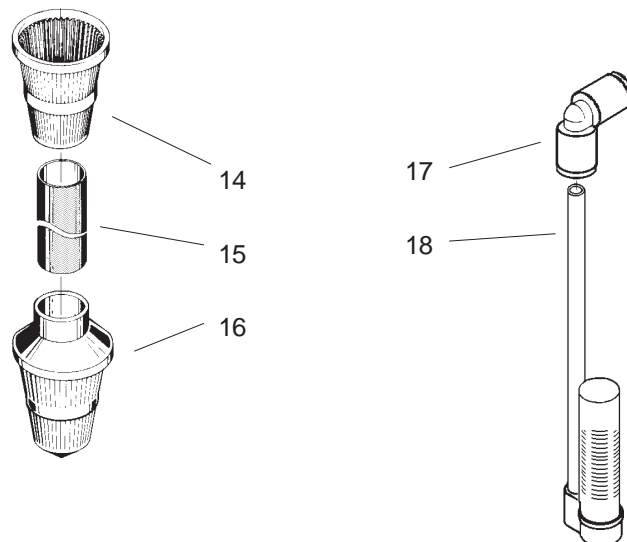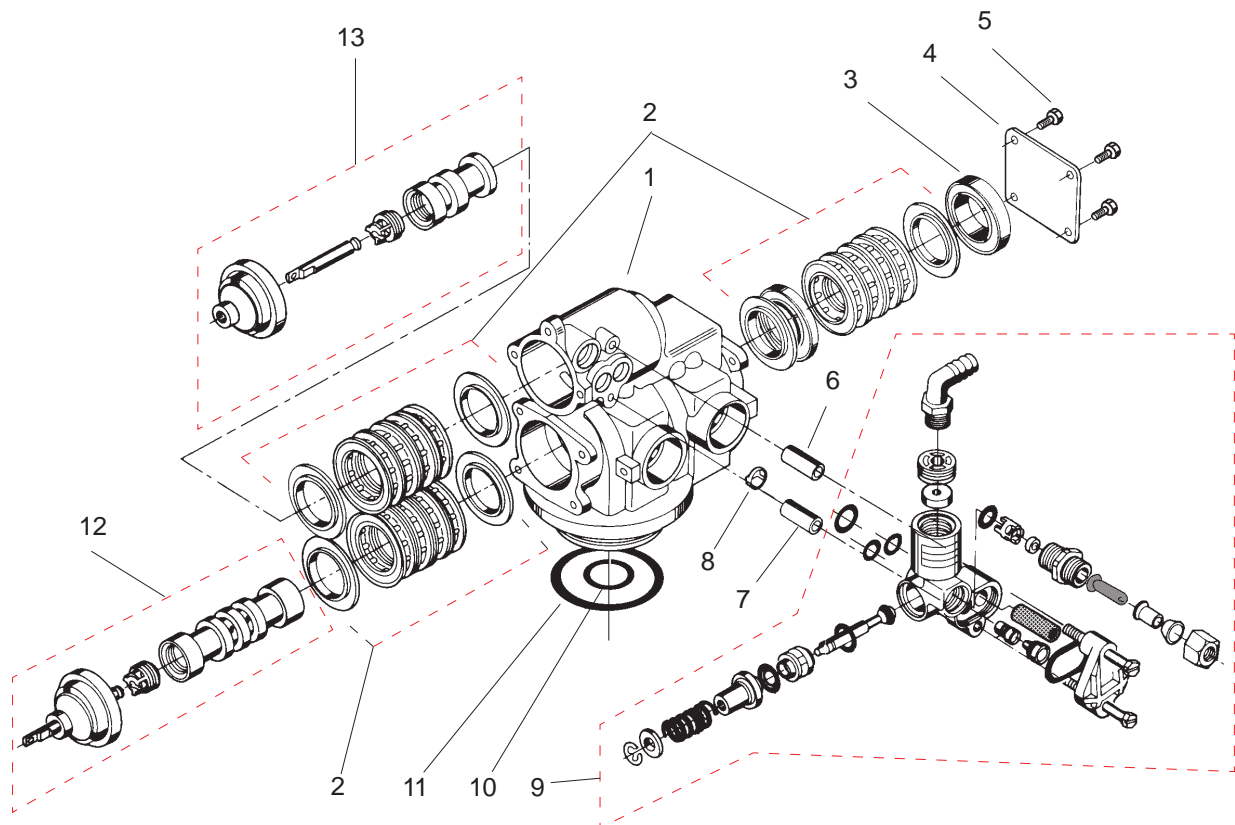


MODEL 9000SE-A

Control Valve Body Assembly

Item	Qty	Part Number	Description
1	1	14861-01-N	Valve body - NP
2	1	25642	Seal & spacer kit
3	1	14928	End plug
4	1	14906	End plate
5	4	15137	Screw
6	1	13361	Injector spacer
7	1	26726	Injector spacer
8	1	13497	Air disperser
9	1	24233-?	Injector assembly - specify
10	1	11710-01	O-Ring
11	1	12281-01	O-Ring
12	1	24235	Lower piston assembly
13	1	24234	Upper piston assembly
14	1	18280	Top screen - bayonet fit
15	1	21874	Riser tube
16	1	25360	Lower screen (optional)
17	1	12794	Tube elbow
18	1	18168	500A air check assy

MODEL 9000SE-A

Control 2nd Tank Adaptor Assembly

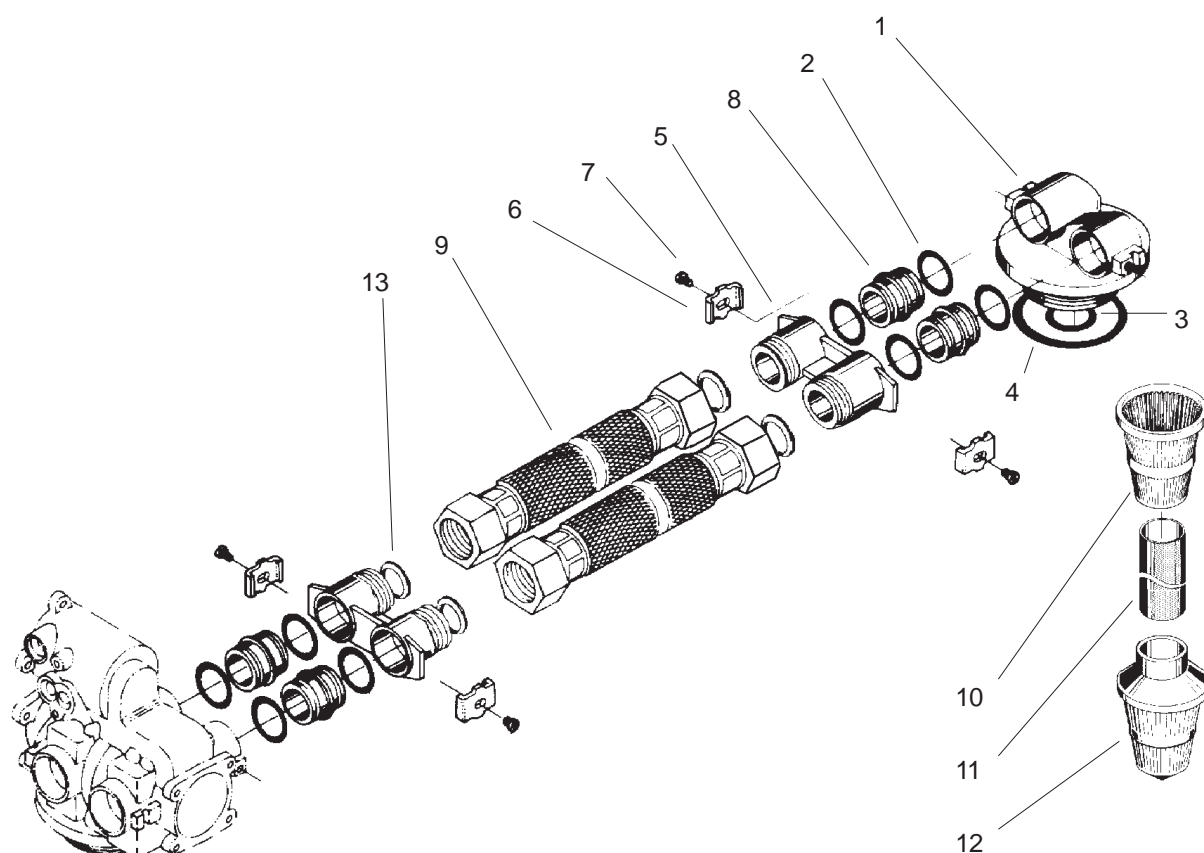

Item	Qty	Part Number	Description
1	1	24238-N	Adaptor
2	8	13305-01	O-Ring
3	1	11710-01	O-Ring
4	1	12281-01	O-Ring
5	2	18706-10	1in BSP yoke
6	4	13255	Adaptor clip
7	4	14202	Screw
8	4	15078-01	Adaptor coupling assy
9	1	FPA-200	Flexible hose assy - pair
or	1	FPA-350	Flexible hose assy - pair
or	1	FPA-500	Flexible hose assy - pair
10	1	18280	Top screen - bayonett fit
11	1	21874	Riser tube
12	1	25360	Lower screen
13	4	11206	Fitting gasket (included in item 9 assy)